


Push Start (SG. E) Diagram

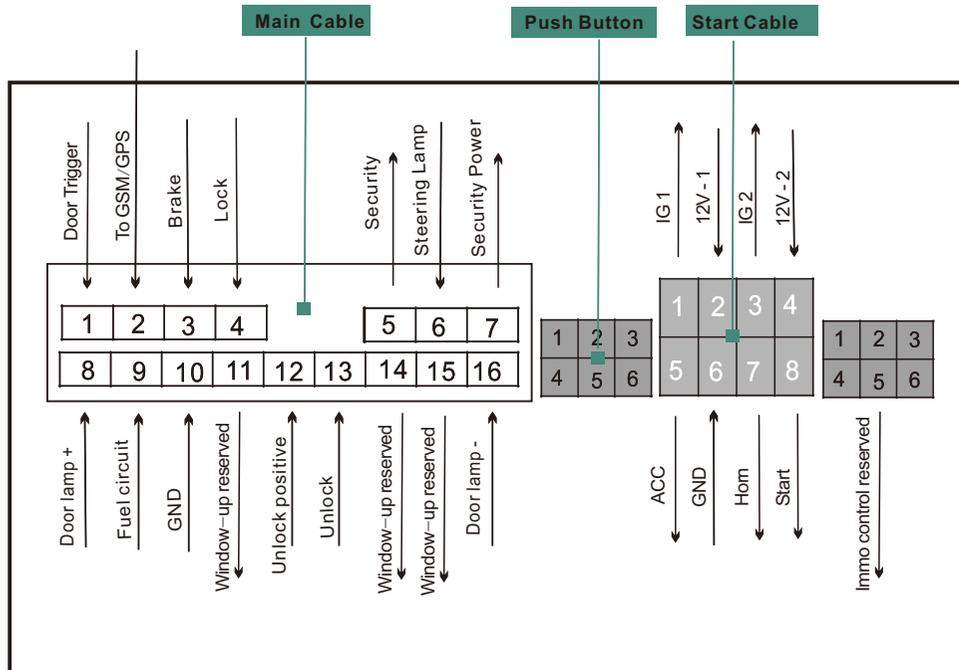

Wire Connection Required:

1. Universal connections normally only need GND, Fuel circuit, Lock, Unlock, Unlock positive, Brake, Door trigger, Steering lamp 1 or 2, Horn.
2. Other wires normally need not except special required. For example, if seek "door trigger" wire difficultly, you have to use door lamp+ or door lamp wire.

Adaption Method:

1. Finish all connections.
2. Change DIP 1-7 to ↓↑↓↑↑↑ for adaption mode.
3. Insert main cable, start cable and push button, the orange light of push button should be on (not flash), which means adaption mode entered.
4. Use key remote unlock once, the orange light of push button should flash, which means adapting unlock signal successfully.
5. Use key remote lock once, the orange light of push button should be off, which means adapting lock signal successfully.
6. Take of main cable, start cable and push button, recover the DIP to proper status.
7. Insert main cable, start cable and push button for real testing.

Note:

1. This mode can adapt most of world cars, but not all.
2. If one time adapting not successfully, try 2-3 more times, if still failure, that means the device can not be adapted for the car.
3. Before adaption, check all connections carefully, especially check doors, trunk, engine bonnet closed well or not.

DIP 8 Remote Start: OFF = Enable; ON = Disable

DIP 1-7 Sequence:

- ↓ ↓ ↓ ↓ ↓ ↑ ↑ ↓ ↓, DIP6 OFF: ACC and IG2 all dumping when starting
- ↑ ↓ ↓ ↓ ↓ ↑ ↑ ↓ ↓, DIP1,6 OFF: ACC dumping when starting
- ↓ ↑ ↓ ↓ ↓ ↑ ↑ ↓ ↓, DIP2,6 OFF: IG2 dumping when starting
- ↑ ↑ ↓ ↓ ↓ ↑ ↑ ↓ ↓, DIP1,2,6 OFF: ACC and IG2 all keeping when starting